

SEER500	22CH Mode1	18CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color	4	3	0---4 5---8 9---12 13---17 18---21 22---55 26---29 30--- 34 35--- 38 39---42 43---46 47---51 52---55 56---59 60---63 64---68 69---72 73---76 77---81 82---85 86---89 90---93 94---98 99---102 103---106 107---110 111---115 116---119 120---123 124--- 127 128---191	WHITE WHITE + RED RED RED + ORANGE ORANGE ORANGE + AQUAMARI AQUAMARINE AQUAMARINE + GREEN GREEN GREEN + LIGHT GREEN LIGHT GREEN LIGHT GREEN + LAVEN LAVENDER LAVENDER + PINK PINK PINK + YELLOW YELLOW YELLOW + MAGENTA MAGENTA MAGENTA + CYAN CYAN CYAN + CTO 260 CTO 260 CTO 260 + CTO 190 CTO 190 CTO 190 + CTB 8000 CTB 8000 CTB 8000 + BLUE BLUE BLUE + WHITE CW SlowRotation----->FastRotation

			192---255	CCW FastRotation----->Slow Rotation
Gobo1(Fixed Gobo)	5	4	0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---43 44---47 48---51 52--- 55 56---59 60---63 64---67 68---71 72---113 114---117 118---159 160---166 167---172 173---179 180---185 186--- 191 192---198 199---204 205---211 212---217 218---223 224---230 231---236 237---243 244---249 250---255	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 GOBO 10 GOBO 11 GOBO 12 GOBO 13 GOBO 14 GOBO 15 GOBO 16 GOBO 17 CW SlowRotation----->FastRotation WHITE CCW FastRotation----->SlowRotation GOBO 2 Shake Slow---->Fast GOBO 3 Shake Slow---->Fast GOBO 4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO 6 Shake Slow---->Fast GOBO 7 Shake Slow---->Fast GOBO 8 Shake Slow---->Fast GOBO 9 Shake Slow---->Fast GOBO10 Shake Slow---->Fast GOBO11 Shake Slow---->Fast GOBO12 Shake Slow---->Fast GOBO13 Shake Slow---->Fast GOBO14 Shake Slow---->Fast GOBO15 Shake Slow---->Fast GOBO16 Shake Slow---->Fast
Gobo2 Select	6	5	0---9 10--- 20 21--- 29 30--- 39 40--- 49 50--- 59 60--- 69	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6

			70--- 79 80--- 89 90---104 105---119 120---134 135---149 150---164 165---179 180---194 195---209 210---255	GOBO7 GOBO8 GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast CCW SlowRotation-----> FastRotation
GOBO2 index Rotation	7	6	0---127 128---191 192---255	Position 0° ---->360° (FINE in CH8) CW SlowRotation-----> FastRotation CCW FastRotation----->SlowRotation
GOBO2 indexRotation FINE	8		0---255	GOBO2 index Rotation FINE
PRISM	9	7	0---127 128--255	EXCLUDED INSERTED
PRISM Rotation	10	8	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation
FORST	11	9	0---255	EXCLUDED----->INSERTED
FOCUS	12	10	0---255	
FOCUS FINE	13		0---255	
ZOOM	14	11	0---255	
ZOOM FINE	15		0---255	
PAN(X)	16	12	0---255	
PAN(X) FINE	17	13	0---255	
TILTE(Y)	18	14	0---255	
TILTE(Y) FINE	19	15	0---255	
P/T SPEED	20	16	0---128 129---170 171---211 212---255	Fastest----->Slowest Slow Speed (1/3 MaxSpeed) Medium Speed (1/2 MaxSpeed) Fast Speed (Fastest Speed)
Lamp Control	21	17	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP ON(>4s) Undefined LAMP OFF(>4s) Undefined HALF POWER Undefined FULL POWER

Control	22	18	0---127	Undefined
			128---255	Reset ALL(>4s)

***NOTE:**关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。