

| EOS-550B | 15CH Mode2 | 11CH Mode | DMX Value | Function |
|----------------------------------|-----------------------|----------------------|--|---|
| Dimmer | 1 | 1 | 0---255 | Darkness----->Bright |
| Dimmer FINE | 2 | 2 | 0---255 | |
| Strobe | 3 | 3 | 0---7 8---63 64---71 72---127 128---133 134---189 190--195 196--250 251--255 | Undefined Fast Strobe----->SlowStrobe Undefined Fast Puslation Slow Close--->Fast Puslation Fast Close Undefined Slow Puslation Fast Close--->Fast Puslation Fast Close Undefined Random Strobe Undefined |
| White | 4 | 4 | | |
| White FINE | 5 | | | |
| Warm White | 6 | 5 | | |
| Warm White FINE | 7 | | | |
| Focus | 8 | 6 | 0---255 | |
| Pan | 9 | 7 | 0---255 | |
| Pan FINE | 10 | 8 | 0---255 | |
| Tilte | 11 | 9 | 0---255 | |
| Tilte FINE | 12 | 10 | 0---255 | |
| P/T Speed | 13 | | 0---128 129---170 172---211 212---255 | Fastest Speed----->Slowest Speed Slow Speed Medium Speed Fast Speed(252---255 :Blackout when moving) |
| Dimmer Mode(Dimm er Curve) | 14 | | 0---64 65---128 129--192 193---255 | Dimmer Curve1(Log Curve) Dimmer Curve2(NExp Curve) Dimmer Curve3(Line Curve) Dimmer Curve4(S Curve) |
| Control | 15 | 11 | 0---130 131---155 156--255 | Undefined Reset ALL Undefined |